


BATTERY

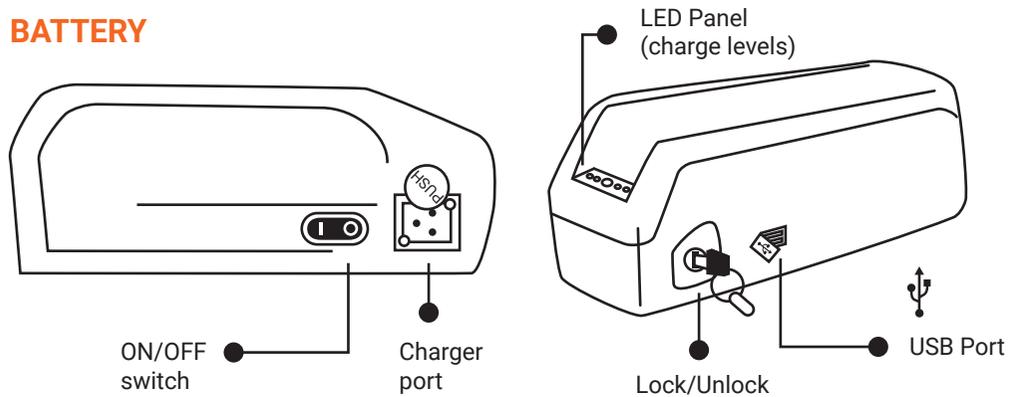


Leave battery off when installing & removing battery from the bike.

Always turn battery off when not using the bike to prevent loss of battery life.

Lock/Unlock. Keep battery LOCKED when in place in the bike. Keep 1 key in your car and 1 key in your bike pack or wallet


USB Port. For cell phone charging.

KEY

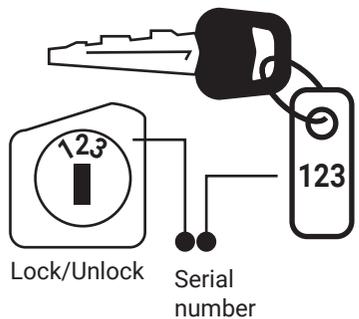


A **SERIAL NUMBER** is printed in the key as well as in the lock/unlock slot. In the event you lose the key, you can contact Cyrusher with this Serial Number to request a key replacement.

CHARGER

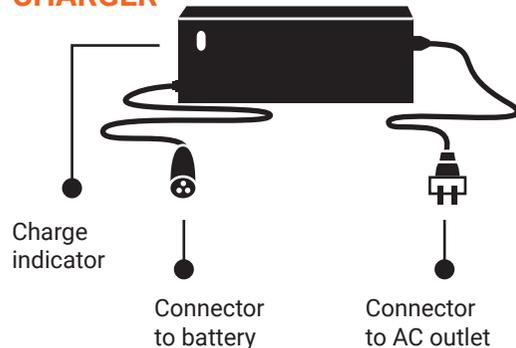

INSERT / REMOVE

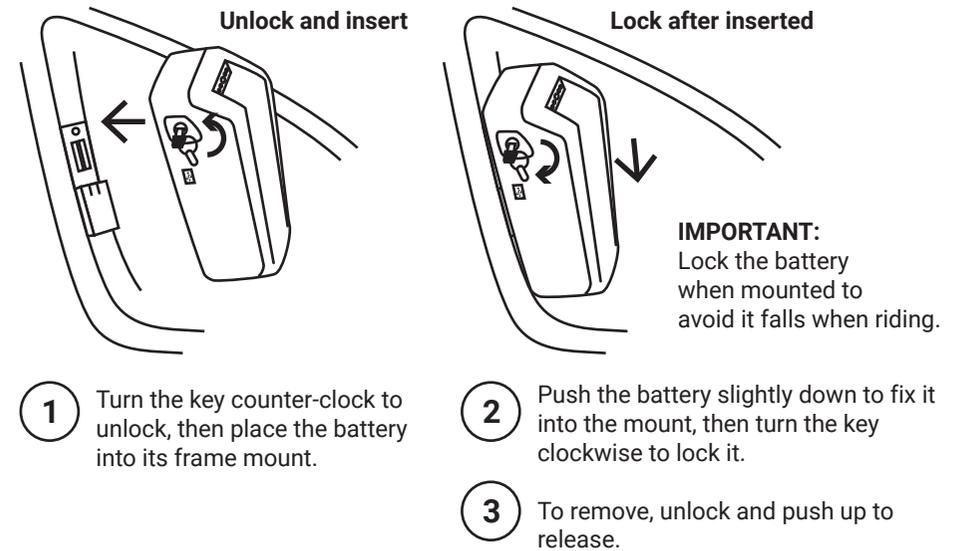


CHARGE


Remove the battery and connect the charger then plug it to the AC outlet. Charge for 4-6 hours. The LED turns green when fully charged.

LED Charge Indicator

RED	- Battery is charging.
GREEN	- Battery is full or disconnected.

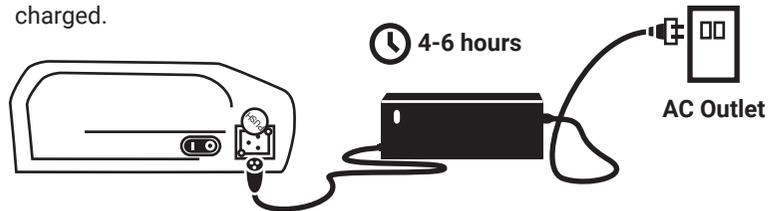

CHECK

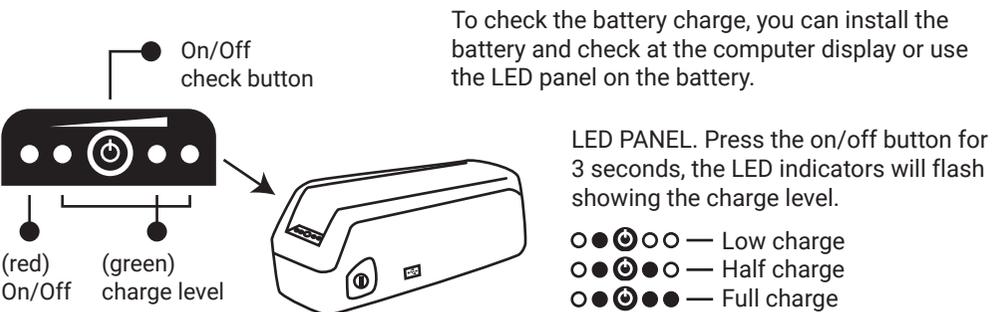



CARE

The battery is an important e-Bike component, and with the correct care you can optimise its life.

Charging – The batteries should be charged at room temperature in a dry location where a smoke detector is installed.

Storage during winter – Store the batteries in a dry location at room temperature. Fully charging or fully discharging results in higher loading of the battery. The ideal charge status for lengthy periods of storage is approx. 30% to 60% or two to three LEDs on the battery indicator.

Cleaning & care – We recommend using a damp cloth to clean the battery. The terminals should be cleaned occasionally and lightly greased. The battery should be removed before cleaning the e-Bike. To protect the electronic components, batteries must not be cleaned with direct water contact.

Winter use – During winter use in temperatures below 35°F (0°C) keep battery stored and charged indoors at room temperature. Exposing the battery to low temperatures will shorten battery efficacy and result in total loss of function.

For cold/snowy weather riding We recommend purchasing a thermal cover for the battery to protect the cells from potential freezing.



Batteries must never be opened – not even if they are being repaired by third parties. Opening the battery always means interfering with the condition that has been approved by Cyrusher and thus introduces safety related risks.

Any battery that has signs of potential cover removal will not be warranted or replaced by CYRUSHER.

Battery Manual

